



Special toolkit for the replacement of air mass sensors

Vehicle/application	Product: Special toolkit
see catalogue/TecDoc CD	PIERBURG No.: 4.07370.26.0

The replacement of standard air mass sensors is hampered through the use of special screws. For such repairs Motor Service is offering a new special toolkit consisting of two insert bits.


These special screws feature a solid post located at the centre of the five star, respectively six star pattern of the screw. Owing to the bore on the face side of the insert bits, these special screws can be unscrewed.

The two tools are 1/4-in. insert bits of proven MSI quality which will fit all commercially available 1/4-in. ratchets or socket wrenches.



*Insert bit T 20
(6 star pattern, Torx®)
with face bore*

*Insert bit TS 25
(5 star pattern)
with face bore*

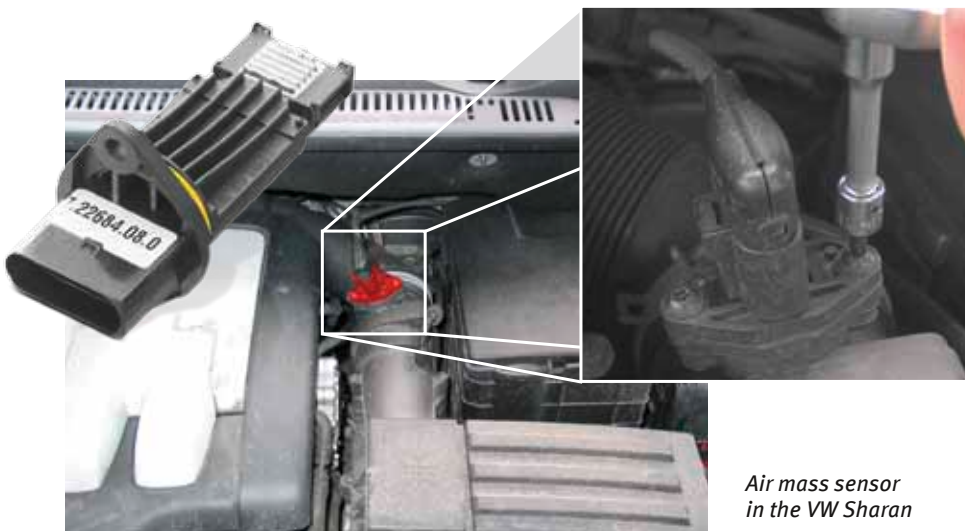

*Air mass sensor
in the VW Sharan*

The new toolkit is required for the following PIERBURG air mass sensors:

- **7.22684.07.0**
for different engines of Mercedes-Benz
 - **7.22684.08.0**
for different engines of the VW Group
- These special insert bits can also be used for other applications.

The right of changes and deviating pictures is reserved. Assignment and usage, refer to the each case current catalogues, TecDoc CD respectively systems based on TecDoc.